


## Implexx Sensor Hub Wiring


### How to connect a wire to the Implexx Sensor Hub

- 1) Insert the wire into the terminal and push as far as possible.
- 2) While still pushing in the wire as far as possible, with a screwdriver press down on the white component on top of the terminal.
- 3) Hold the wire as far as into the terminal as possible, then release the white component and remove the screwdriver.
- 4) The wire should now be firmly affixed. Pull on the wire and it should not release. If it does release, repeat the steps above.

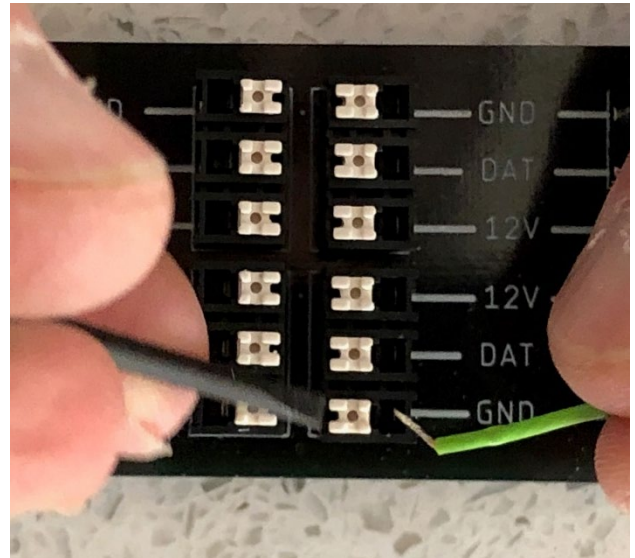

### How to release a wire from the terminal

- 1) With a screwdriver, press down on the white component on top of the terminal.
- 2) While still pressing down with the screwdriver, pull on the wire to remove it from the terminal.
- 3) Release the screwdriver from the terminal.

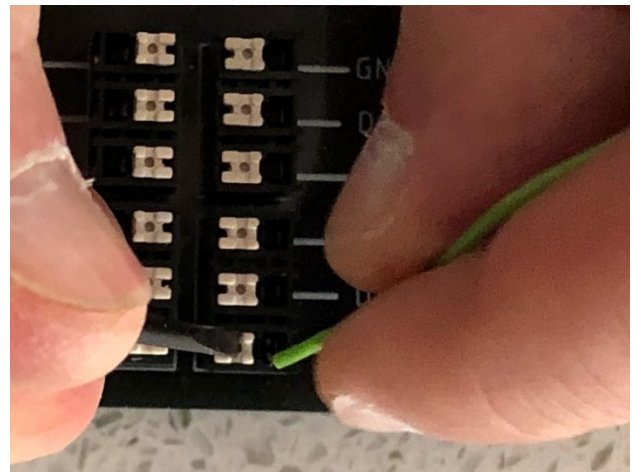

**Implexx**  
Digital Environmental  
Sensing